



# DIMENSIONS / AREA OF OPERATION


## Plan view

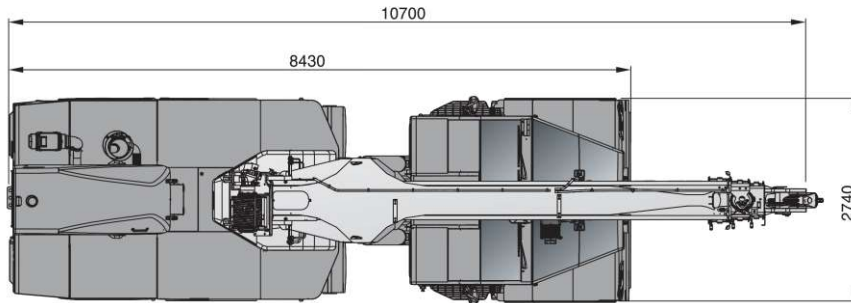


## Right hand view

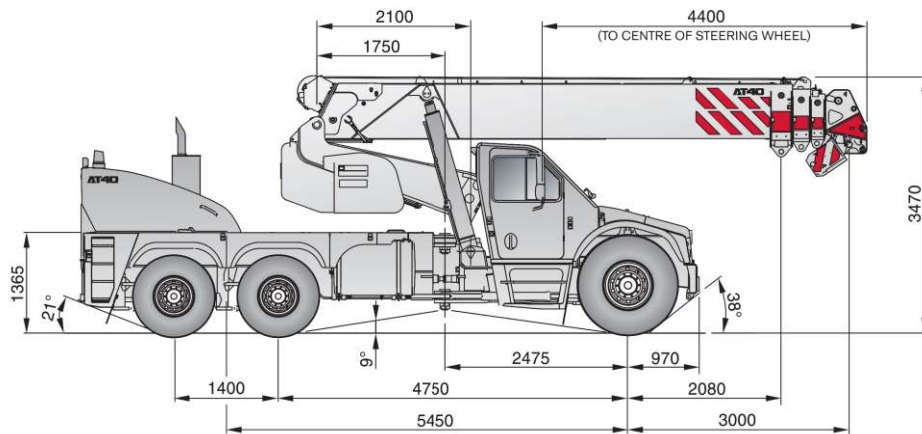

## Area of operation

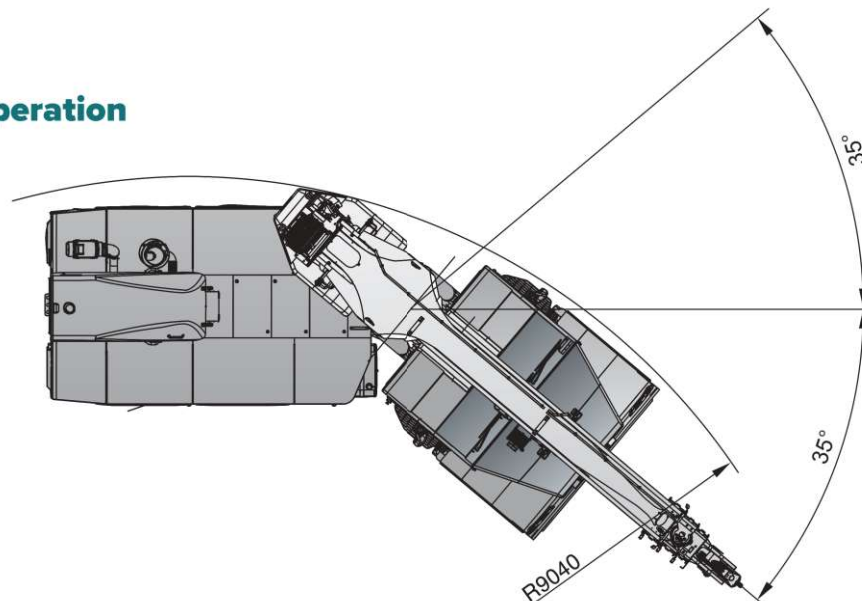

# RADIUS LOAD CHART

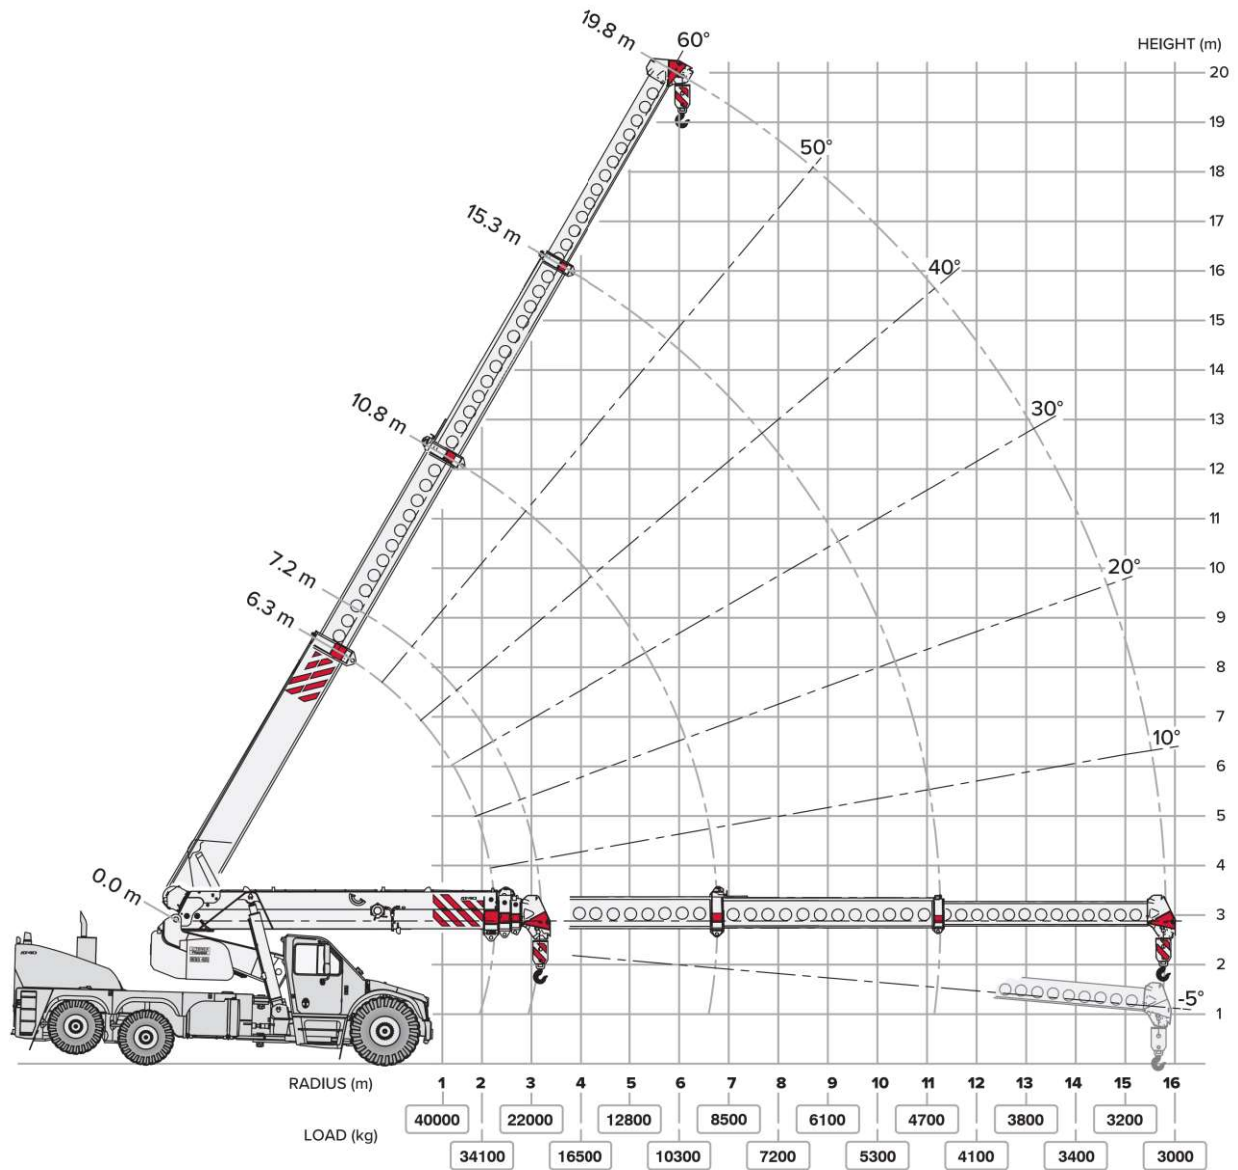

NOTE: Rated Capacity values shown are for the Pick and Carry Chart.  
The Static Chart will give higher rated capacities.





# OUR LOCATIONS



## Brisbane (Head Office)

Terex Australia Pty Ltd  
585 Curtin Avenue East (PO Box 1396)  
Eagle Farm QLD 4009, Australia

**Tel:** +61 7 3868 9600

**Fax:** +61 7 3268 2489

**Services:** Manufacturing, Sales, Service, Parts

## Sydney

Terex Australia Pty Ltd  
114 Hassall Street  
Wetherill Park NSW 2164, Australia

**Tel:** +61 2 8786 4444

**Fax:** +61 2 8786 4455

**Services:** Sales, Service, Parts

## Melbourne

Terex Australia Pty Ltd  
133 Logis Boulevard  
Dandenong South VIC 3175, Australia

**Tel:** +61 3 8794 4170

**Fax:** +61 3 9551 8143

**Services:** Sales, Service, Parts

## Perth

Terex Australia Pty Ltd  
39 Catalano Road  
Canning Vale WA 6155, Australia

**Tel:** +61 8 9232 0000

**Fax:** +61 8 9232 0051

**Services:** Sales, Service, Parts

**Tel:** 1800 837 395

**Email:** [franna@terex.com](mailto:franna@terex.com)